



How to use IFC+SG in BricsCAD


1. Download and save the BricsCAD_IFC+SG XML file.
2. In BricsCAD: On the Ribbon, go to BIM Data tab, and select Properties to activate the BIM Properties Dialog.

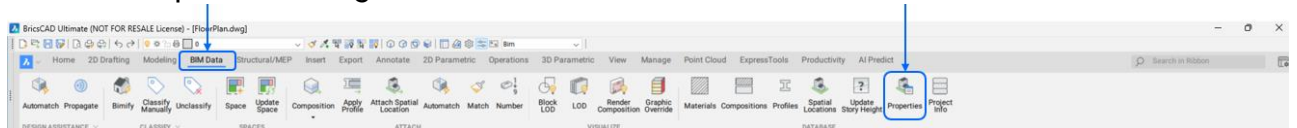


3. In the BIM Properties Dialog, click on Import.

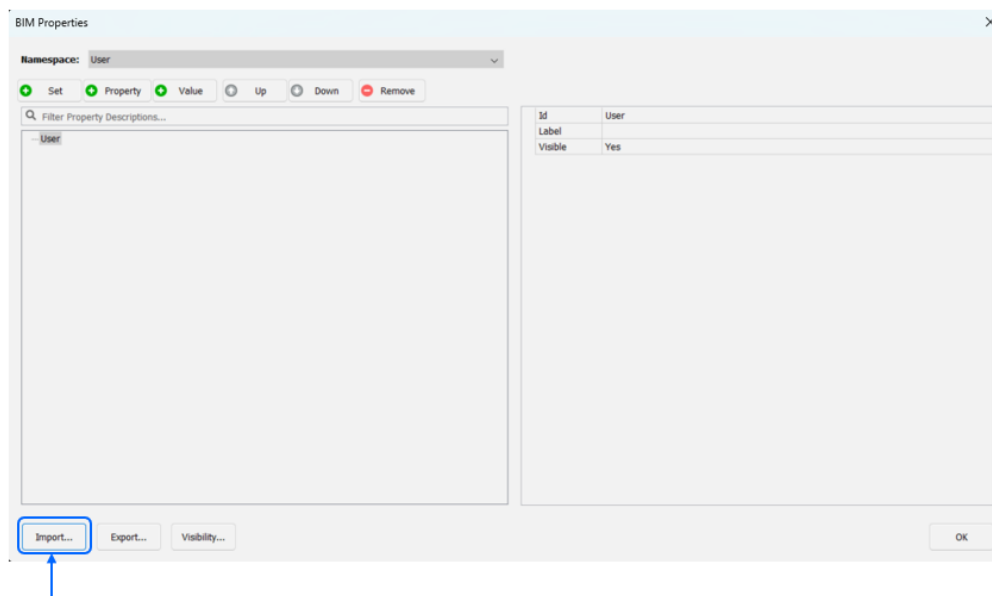

4. Select the provided BricsCAD_IFC+SG XML file.

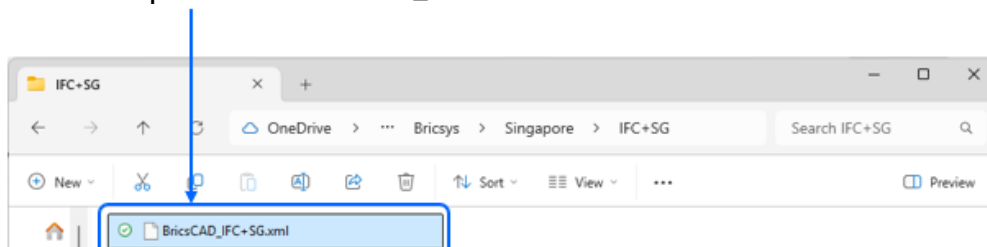

- The IFC+SG properties have been added automatically. Click OK to exit the dialog.

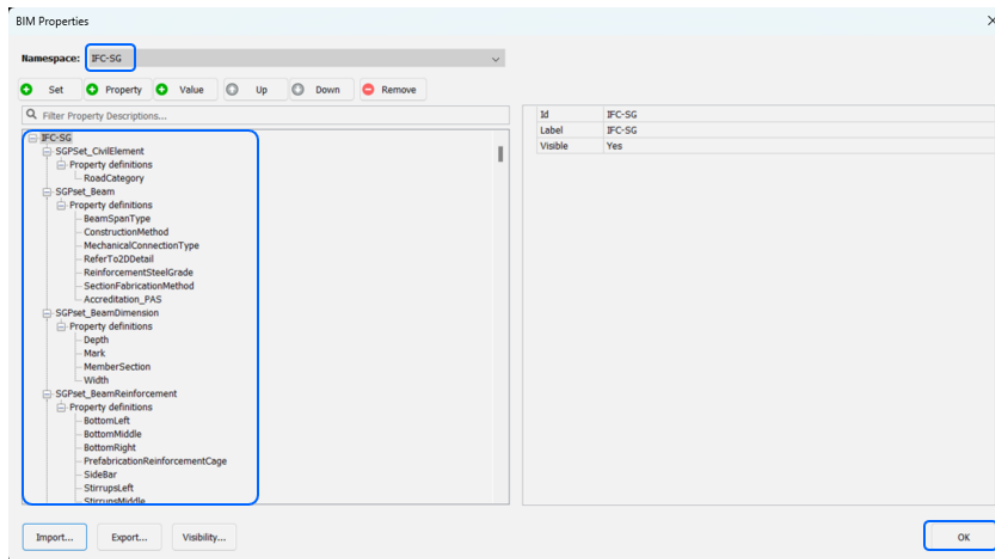

- The list of IFC+SG properties will now be visible on the Properties Panel which you can use to input the values. (You will see the respective properties depending on the type of entity you add or select).

